

Before you begin

Ensure the curtain track is secured into the mounting brackets correctly and the motor is secured to the correct side of the track with the clasp at the base of the motor locked securely.

If using a Somfy multi-channel control, ensure the desired channel is selected prior to starting the programming process.



Power up the motor

- 1 Switch the power to the motor on or insert the battery pack into the battery chamber at the base of the motor.

Battery powered unit:

If the motor does not respond to any of the steps below, then charge up the motor battery pack.




Start the programming process

- 2 Start by **BRIEFLY PRESSING** the control Up & Down or Open & Close buttons together - the blind will briefly jog. The control is now temporarily paired to the motor and you have 10 mins to complete the programming process.



Open/close learning phase

- 3 **BRIEFLY PRESS & RELEASE** the Open/Up button on the control. The motor will begin to operate and the curtain track will run through an open and close cycle to learn the stopping positions. Wait until the track has stopped operating.

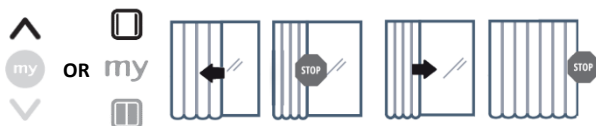


Checking/correcting the motor direction

- 4 **BRIEFLY PRESS & RELEASE** the Open/Up button on the control. If the curtain track opens the direction is correct:

– go to the next step.

If the curtain track closes, **PRESS & HOLD** the 'my' button on the control until the curtain track jogs to reverse the direction.

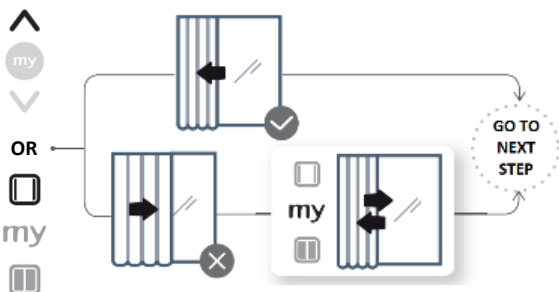

Pair the control/channel and complete the programming process

- 5 **BRIEFLY PRESS & RELEASE** the program button on the back of the control - the curtain track will briefly jog.

The control/channel is now paired to the motor and the curtain track can be operated.

