

Before you begin

The following procedure will only work if the motor is programmed correctly and operating in user mode. When the motor is programmed correctly and operating in user mode, the blind will:

- Operate with a brief press of the Up or Down buttons.
- The blind will operate to the preset upper or lower stop position and automatically stop.
- You do not have to hold the Up or Down buttons to operate the blind.

If you have to hold the Up/Down buttons to operate the blind, then we recommend you carry out a reset & reprogram procedure on the blind motor.

Operate the blind the current upper or lower stop position

- 1** Press the Up or Down button on the control to operate the blind to the current upper or lower stop position. *You must allow the blind to travel to the current upper or lower stop position and stop automatically.*





Press the Up button and allow the blind to stop at the current Up position.



Press the Down button and allow the blind to stop at the current Down position.

Set the motor into adjustment mode


- 2** Once the blind has stopped at the current upper or lower stop position: **PRESS & HOLD** the Up & Down buttons on the control until the blind jogs.

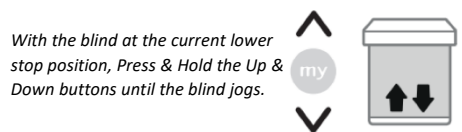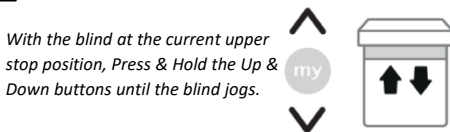


Adjust the blind to the new stop position

- 3** Now use the control to adjust the blind to the new upper or lower stop position - example:

Use the Up button to raise the upper stop position slightly.


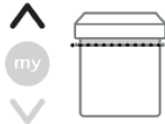


Use the Down button to lower the down stop position slightly.

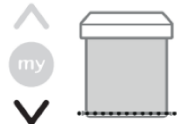

Record the new stop position

- 4** Once the blind has been adjusted to the new stop position: **PRESS & HOLD** the 'my' button on the control until the blind jogs.

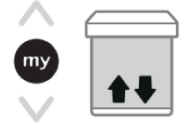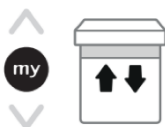

The new stop position has been recorded.