

### Before you begin

The following procedure will only work if the motor is programmed correctly with multiple blinds operating independently on separate channels.

If your blinds are not operating independently on separate channels, then we recommend you carry out a reset & reprogram procedure per blind and assign the correct channel sequence when programming.

### ASSIGNING A CHANNEL FOR GROUP BLIND CONTROL


*The following procedure will copy & paste an already paired channel to a spare channel on the multi-channel control  
Example – a 3 blind system, with blinds 1 to 3 currently paired to channels 1 to 3 - group control wanted on channel 5*

#### Set the motor into pairing mode

- 1 Select the channel currently operating the blind independently (e.g. channel 1).



**PRESS & HOLD** the program button on the control until the blind jogs – then release the program button:

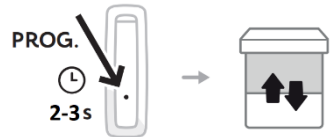

#### Pair to the selected group channel

- 2 Select the spare channel you want to assign for group channel control (e.g. channel 5).



**BRIEFLY PRESS & RELEASE** the program button on the control - the blind jogs: The blind has been assigned to the group channel.



*Follow the same procedure as above to assign additional channels*

#### Set the motor into pairing mode

- 1 Select another channel operating a different blind (e.g. channel 2).



**PRESS & HOLD** the program button on the control until the blind jogs – then release the program button:



#### Pair to the selected group channel

- 2 Select the spare channel you want to assign for group channel control (e.g. channel 5).



**BRIEFLY PRESS & RELEASE** the program button on the control - the blind jogs: The blind has been assigned to the group channel.

