

## Before you begin

The following procedures will only work if the motor is programmed correctly and operating in user mode.


When the motor is programmed correctly and operating in user mode, the blind will:

- Operate with a brief press of the Up or Down buttons.
- The blind will operate to the preset upper or lowers stop position and automatically stop.
- You do not have to hold the Up or Down buttons to operate the blind.

If you have to hold the Up/Down buttons to operate the blind, then we recommend you carry out a reset & reprogram procedure on the blind motor.

## Activate pairing mode

- 1** **PRESS & HOLD** the button on the motor head until the blind jogs:  
*The motor should jog after: 2-3 secs*  
Release the button as soon as the motor completes the first jog cycle.

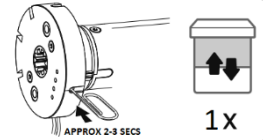

## Pair the control/channel to the motor

- 2** If using a Somfy multi-channel control, ensure the desired channel is selected prior to pairing.



**BRIEFLY PRESS & RELEASE** the program button on the control:  
*The motor will briefly jog – the control/channel is paired.*




## DELETE ALL CONTROLS IN THE MEMORY OF THE MOTOR AND PAIR A NEW CONTROL/CHANNEL

*The following procedure will delete all previously stored controls/channels in the memory of the motor and pair a new control/channel*

## Delete all controls in the memory of the motor and activate pairing mode

- 1** **PRESS & HOLD** the button on the motor head until the blind jogs two times:  
*The motor should jog after: 2-3 secs and again after 5-6 secs*  
Release the button as soon as the motor completes the second jog cycle.

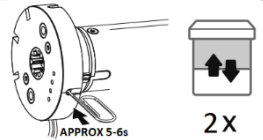

## Pair the control/channel to the motor

- 2** If using a Somfy multi-channel control, ensure the desired channel is selected prior to pairing.



**BRIEFLY PRESS & RELEASE** the program button on the control:  
*The motor will briefly jog – the control/channel is paired.*

All previously paired controls/channels are deleted and the new control/channel is paired.

