

Before you begin

Ensure the motor is powered up (if mains powered) or the battery pack is fully charged (if battery powered) before starting the reset procedure.

A small blunt tool such as a paper clip or small precision driver will be required to depress the reset button located at the base of the motor.


If using a Somfy multi-channel control, ensure the desired channel is selected prior to starting the programming process.



Power up the motor


- PRESS & HOLD** the reset button on the motor base until the track jogs three times
The track should jog after: 2-3 secs, 5-6 secs & 10 secs

Don't release the button until the motor has completed the cycle of three separate jogs over this approximate time period.

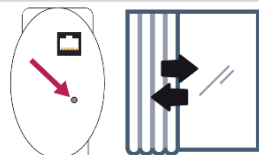


Start the programming process

- Start by **BRIEFLY PRESSING** the control Up & Down or Open & Close buttons together - the blind will briefly jog. The control is now temporarily paired to the motor and you have 10 mins to complete the programming process.

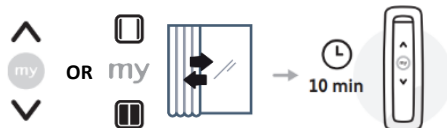

Open/close learning phase

- BRIEFLY PRESS & RELEASE** the Open/Up button on the control. The motor will begin to operate and the curtain track will run through an open and close cycle to learn the stopping positions. Wait until the track has stopped operating.

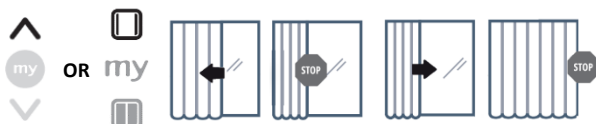


Checking/correcting the motor direction

- BRIEFLY PRESS & RELEASE** the Open/Up button on the control. If the curtain track opens the direction is correct:

– go to the next step.

If the curtain track closes, **PRESS & HOLD** the 'my' button on the control until the curtain track jogs to reverse the direction.

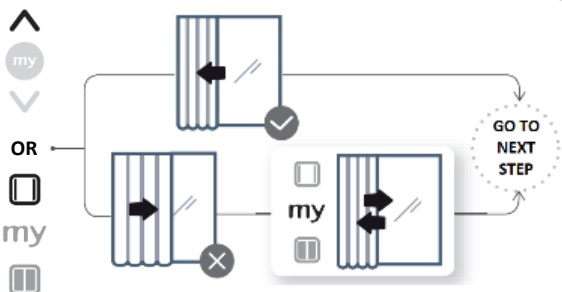

Pair the control/channel and complete the programming process

- BRIEFLY PRESS & RELEASE** the program button on the back of the control - the curtain track will briefly jog.

The control/channel is now paired to the motor and the curtain track can be operated.

