

## Before you begin

 
The following procedure will only work if the motor is programmed correctly and operating in user mode. When the motor is programmed correctly and operating in user mode, the blind will:

- Operate with a brief press of the Up or Down buttons.
- The blind will operate to the preset upper or lower stop position and automatically stop.
- You do not have to hold the Up or Down buttons to operate the blind.

If you have to hold the Up/Down buttons to operate the blind, then we recommend you carry out a reset & reprogram procedure on the blind motor.


## Operate the blind to the desired 'my' position

- 1 Use the control to operate the blind to the desired 'my' position.  
*Example – operate the blind to the mid-point and stop it.*

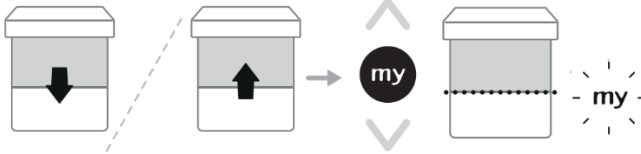


## Record the 'my' position

 - 2 With the blind stationary and positioned at the desired 'my' position: **PRESS & HOLD** the 'my' button on the control until the blind jogs – the 'my' position has now been recorded.

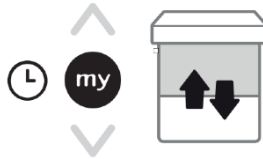

## Operate the blind to the 'my' position

 - 3 ! – The blind must be stationary. **BRIEFLY PRESS & RELEASE** the 'my' button on the control:
  - The blind will operate to the programmed 'my' position and stop.

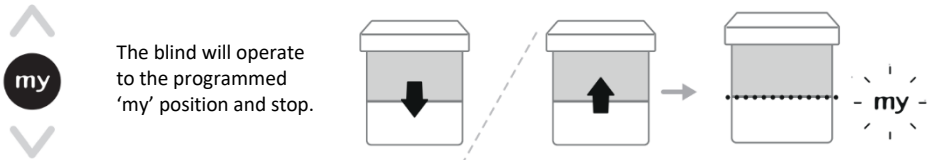

## Delete the 'my' position

- 4 Operate the blind to the current 'my' position: **PRESS & HOLD** the 'my' button on the control until the blind jogs - *the 'my' position has been deleted.*

