


Blind installation


Bracket fitting options

The brackets can be fitted in the following ways:

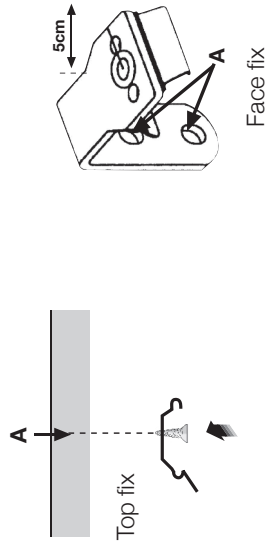


Marking the bracket positions

Put the brackets in place at the correct position for the blind and mark the fixing points per bracket.

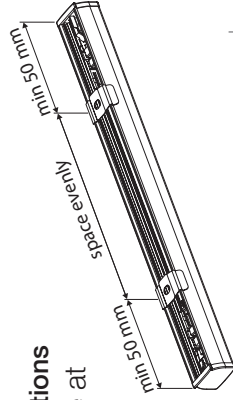

Marking/drilling the bracket positions


If securing the brackets to plaster, brick, stone, etc., drill the holes at the marked positions using a 5.5mm masonry drill bit.

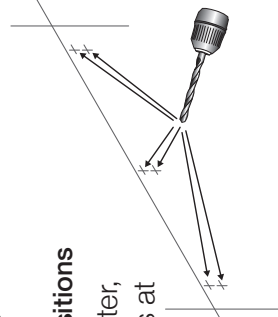


Fix the brackets in place using the rawl plugs and screws supplied.

Mounting the Cellular blind

Face fix

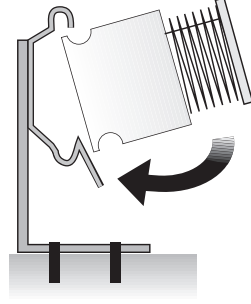

Top fix

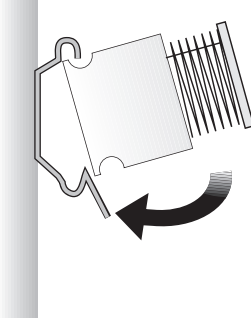

While tilting the blind headrail at a slight angle, locate the horizontal groove running across the front section of the headrail into the front hook of the bracket. Press the back up into position until it clicks and secures in place.

Removing the blind - Start at one end of the blind and:

- 1) Push the tab at the rear of the bracket up to release the back section of the headrail.
- 2) Tilt the headrail down at the rear and unhook the headrail from the rear section of the bracket.
- 3) Repeat ensuring that the headrail is adequately supported.